

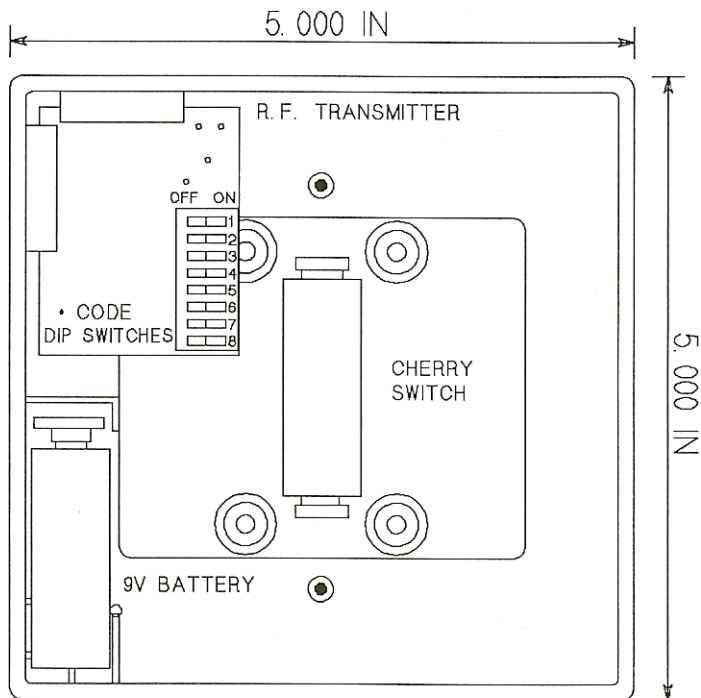


# DMT DM-P1B COMPONENTS

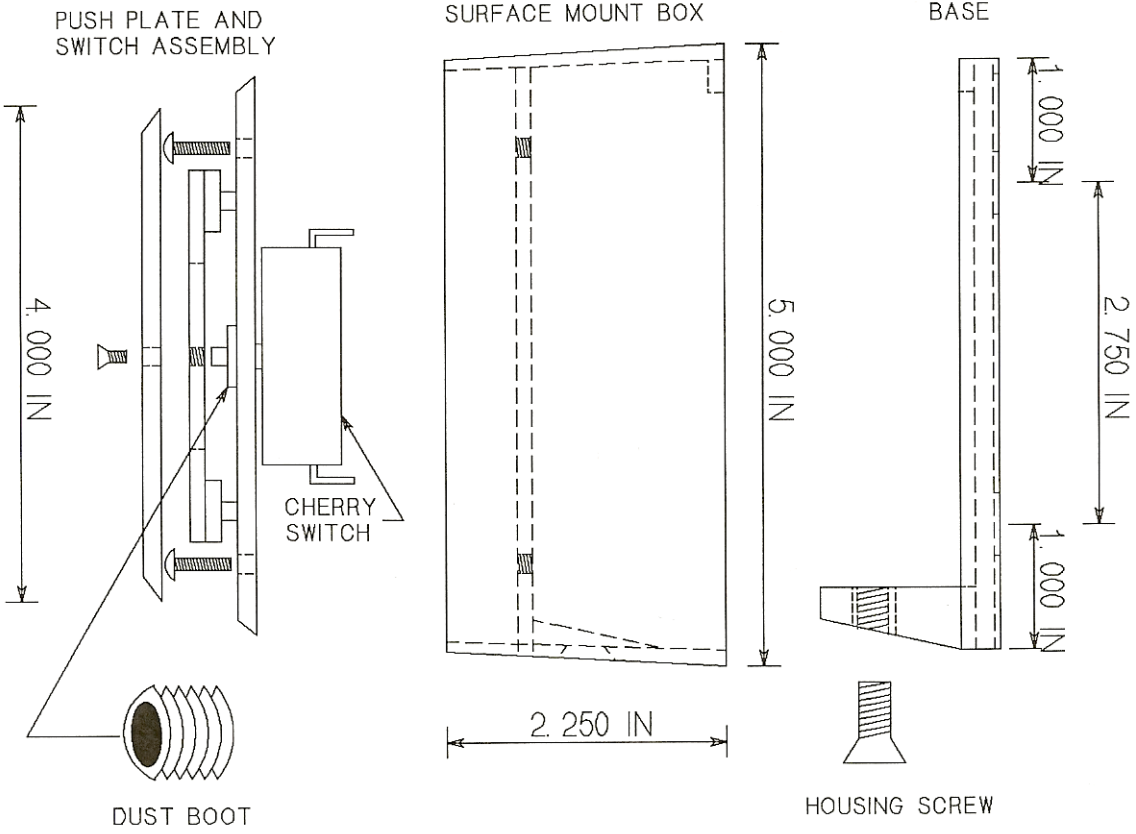

• SET CODE DIP SWITCHES, THEN MATCH PATTERN ON RECEIVER DIP SWITCHES.

# P1-B & P2-B MOUNTING TEMPLATE

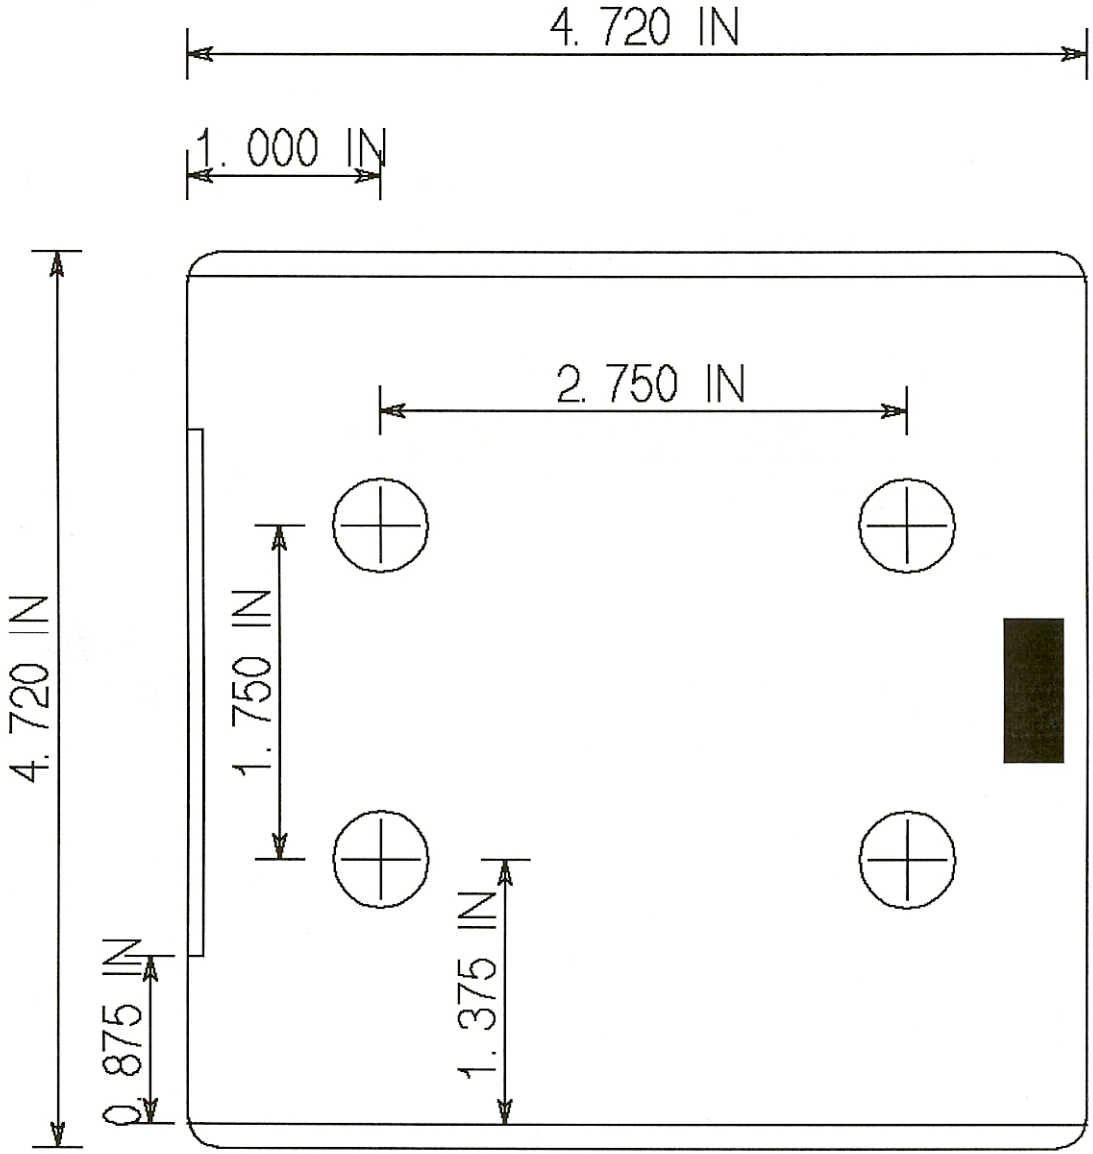

MOUNTING BOSSES ON BACK OF BASE TO BE DRILLED BY CUSTOMER IN FIELD. USE 3/16 IN. DRILL FOR #6 OR #8 SCREWS.